Oscillating Halogen Heater with Remote **MODEL: EV2220HH**

USER MANUAL

1600 Watt Halogen Heater with Remote Controller and Delay Timer
TECHNICAL SPECIFICATIONS

Voltage	230-240V~ AC
Frequency	50 Hz
Power input	1600 Watts
Features	Remote Control Timer Function Oscillating Function

PACKAGE CONTENTS
1 Halogen Heater
1 Base unit
2 Screws
1 Instruction manual

Confirm all parts before disposing of carton. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

SAFETY INSTRUCTIONS
Carefully read this manual before using this heater. Make sure that you know how the heater functions and how to operate it. Maintain the heater in accordance with the instructions to ensure that it functions properly. Keep this manual with the heater. If the heater is to be used by a third party, this instruction manual must be supplied with it. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used. No liability can be accepted for any damage or personal injury caused by non-compliance with these instructions or any other improper use or mishandling.

WARNING! Do not use this heater if it has been dropped or damaged in any way, or if the supply cord is damaged.

ASSEMBLY AND OPERATION

Check for damage.
Upon opening check to ensure that all parts of this appliance, cord and plug are not damaged.

Assembling the Base.

To fit the base unit to the heater simply place the supply cord through the base centre hole, locate the base onto the bottom of heater as shown in fig 1. and attach with the two securing bolts supplied. Fit the supply cord into the supply cord clips as shown in fig 1. Once the unit is secure it should look like that shown in fig 2.

WARNING! Do not operate without the base securely fitted.

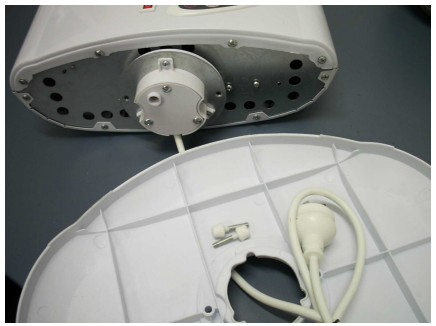

Fig 1

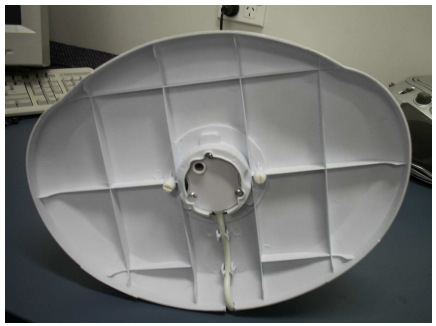

Fig 2

Location.
Place on a level flat surface. Keep away from any combustible material such as curtains. Allow freedom of movement under "Oscillating" mode. Do not place in any area where it may be possible to accidentally tip the heater over, keep away from traffic flow areas.

WARNING! **Keep heater away from young children.**

Power Connection.
Connect to a suitable power supply, corresponding to that of the appliance, 230-240~V AC 50 Hz. This is a class 1 appliance and must be earthed.

Remote Control Battery Installation (Batteries not supplied)
Remove the rear cover on the battery compartment by sliding it outwards. Fit two new AAA size batteries into the remote control battery compartment. Replace the cover. **Warning!** Always use batteries of the same battery type. Never mix battery types and always replace both batteries at the same time. Remove batteries if the heater is to be stored over summer.
CAUTION: Old batteries may leak.
WARNING! Dispose of any used battery according to battery disposal instructions.

Remote control Function
The remote control has 4 positions.

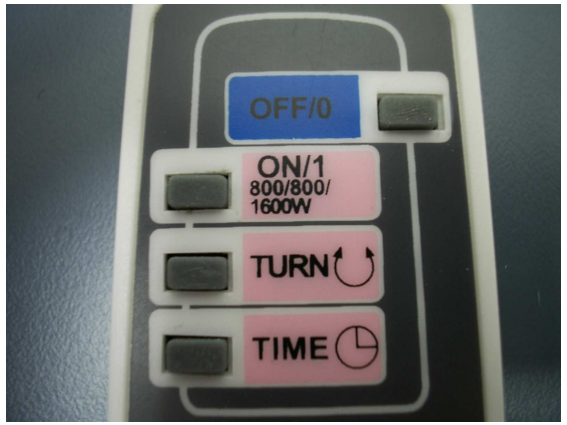

a. Press to turn the heater off
b. Press to turn the heater on and to choose your desired heat setting (800W or 1600W)
c. Press to engage the oscillating function
d. Press to enable the timer function. Depress until your desired time has been selected.

Note: These same control buttons are located on the face cover of the appliance.

Heat
Connect the supply plug to a suitable 230-240V~ AC power supply outlet. Turn power on at socket outlet. Press the on/off main switch to **I** (on) or **O** (off). For first time use, the unit will turn on 2 bars, after this the heater will remember your last heat setting and therefore may initially use 2 or 4 bars when turned on. Select the desired heat setting by pressing the heat selector button on the remote controller (ON/1) for full (4 bars) or half (2 bars) heat power. This can be done on the remote control or on the heater itself.

Oscillating Function
This enables the heater to spread the heat over a wider arc. Simply press the oscillation button (TURN ↺) once to oscillate and again to turn the oscillation feature off.

Setting the timer
The timer function enables you to turn the unit off after a preset amount of time. This timer function can be set in half hour increments, up to 7.5 hours. Press the TIME ◷ button until the desired time is shown. You will know that a time is set when the corresponding lights are shown on the heater panel.
EG: Two turn the heater off after 2.5 hours, the 2h and 0.5h lights will be lit. Continue to depress the TIME ◷ button to reset (show no time) or to change the remaining ON time.

Safety features.
This heater is equipped with an overbalance safety cut-off tip switch. Should the heater be knocked over accidentally, this safety switch will cut power to the heater immediately.

ELECTRICAL SAFETY

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.
Always check that the power supply corresponds to the voltage on the rating plate.
Supply cord and plug.
Always unplug from mains supply when not in use. Do not abuse or damage the power cord. Fully unwind the cord before use as a coiled cord may overheat.
If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
Children.
Caution. Be aware of the danger to young children of any electrical appliance. Keep out of reach of young children.
This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance.
This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
Water.
Do not immerse appliance in water or other liquid. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
Do not immerse any part of this appliance or supply cord in water. Do not use with wet hands or use in any damp situations.
Environment.
This appliance is designed for inside use only. Do not use near curtains or other combustible materials. Do not use outdoors. Do not use near a hot gas or electrical burner. This heater must not be located directly below a socket outlet. This appliance must not be used in locations where flammable vapour or explosive dust is likely to exist. This heater must not be used in the immediate surroundings of any bath, shower or swimming pool or used in any other damp area where contact with water may create an electrical hazard.
Timers.
" Do not use this heater with a thermal control, a programmed control, a timer or any other device that switches the heater automatically, since a fire risk exists if the heater is covered or displaced."

Earth safety.
This appliance must be earthed.
Connect to a suitably earthed supply socket only, corresponding to the requirements of this appliance. Do not overload the circuit. Only connect this heater to the socket outlet.
Do not cover this heater.
Always leave a gap around the heater. Be aware that this heater has an oscillating feature.
Damaged or dropped.
Always inspect your heater before use. Do not use this appliance if it has been damaged, dropped, left outdoors or dropped in water.
Store in a safe place
When not in use store your appliance and all its accessories and instruction manual in a safe and dry place.
Do not attempt to service this heater yourself. Return it to a qualified service agent for repair. This appliance requires no maintenance.

MAINTENANCE
This appliance requires no specific maintenance. Simply keep the appliance clean from dust and dirt. Check for damage before use.

Before cleaning.
When not in use or before cleaning, always disconnect the appliance from the mains supply.
Cleaning.
Regularly clean the outside of the appliance of dust with a soft damp cloth and dry it with a dry towel. Do not immerse in water. Do not use harsh solvents.
Damage check.
Always check that the appliance is in good working order and that all parts are secure. Check the power supply cord and plug regularly for cuts or damage.
Store in a safe place
When not in use store your appliance and all its accessories and instruction manual in a safe and dry place.

evantair

Guarantee Card

This product is guaranteed against faulty materials and workmanship for a period of 24 months from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from whom this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALLY LIMITED TO 90 DAYS

Appliance Description: **1600W Oscillation Halogen Heater with Remote**

Model No.: **EV2220HH** Purchase Date: _____

Product Purchased From: _____

Your Name: _____

Address: _____

_____ Phone Number:_____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.

For Technical Assistance
Australia Call Toll Free 1-800-858011
service@orientalpacific.com
www.orientalpacific.com